

WHAT ARE THE DIFFERENCES AMONG THE PREZ1, PR-US2 AND PR-PRO3 PRESENTATION REMOTES?

Related Products

PREZ1
PR-US2
PR-PRO3

Article Number

000229

Tripp Lite offers three presentation remotes: the PR-EZ1, PR-US2 and PR-PRO3. Each has a slide forward and slide back (a.k.a. next/previous slide) button as well as a volume control. Each has a laser pointer button and PowerPoint and Keynote control. Selecting a remote depends on personal preference, but you should consider if you need mouse control. If you do, choose the PR-US2 or PR-PRO3. Mouse control is helpful if you are controlling programs other than PowerPoint and Keynote. If you do not need mouse control, choose the PR-EZ1 because it is entirely button-based. Fewer buttons make it easier to control your PowerPoint presentation. Below is a features summary of the three Keyspan® USB presentation remotes:

PR-EZ1 Easy Presenter:

This remote has individual buttons for different actions. Since it is entirely button-based, it is easy for anyone to use with PowerPoint and/or Keynote. This remote uses a coin-style battery and has an on/off switch. (The PR-US2 does not have an on/off switch; the PR-PRO3 does.) The PR-EZ1 does not include mouse control. (The PR-US2 and PR-PRO3 have mouse control.) Buttons include:

- NEXT SLIDE
- PREVIOUS SLIDE
- VOLUME UP
- VOLUME DOWN
- MUTE
- LASER POINTER
- BLACK SCREEN
- F5 (STARTS SLIDESHOW IN POWERPOINT FOR WINDOWS)
- ESC (ENDS SLIDESHOW IN POWERPOINT AND KEYNOTE)
- ON/OFF

PR-US2 Presentation Remote:

The PR-US2 includes mouse control with left/right click buttons, but lacks the black screen, F5, and ESC buttons. It has volume control but does not have a dedicated button for this purpose. Instead, this remote has a MODE button that gives each button a different purpose depending on which mode you are using (Presentation mode or Media mode). The PR-US2 uses a coin-style battery but does not have an on/off switch. Because of this, the remote requires the laser pointer to be enabled prior to use (by pressing two buttons on the remote). Buttons include:

- NEXT SLIDE
- PREVIOUS SLIDE
- VOLUME UP (VIA MEDIA MODE)
- VOLUME DOWN (VIA MEDIA MODE)
- MUTE (VIA MEDIA MODE)
- LASER POINTER (MUST BE ENABLED BY PRESSING TWO BUTTONS)
- MOUSE CONTROL PAD
- LEFT/RIGHT MOUSE CLICK

PR-PRO3 Presentation Remote:

The PR-PRO3 combines the features of the PR-US2 and PR-EZ1, plus includes additional features. It uses two AA batteries for easy replacement and has a storage area in the remote for the USB receiver. It has mouse control, two types of slide control and volume controls. Buttons include:

- NEXT SLIDE (ON THE REMOTE'S FACE)
- PREVIOUS SLIDE (ON THE REMOTE'S FACE)
- NEXT SLIDE (VIA A SWITCH ON THE RIGHT SIDE OF THE REMOTE)
- PREVIOUS SLIDE (VIA A SWITCH ON THE RIGHT SIDE OF THE REMOTE)
- VOLUME UP
- VOLUME DOWN
- LASER POINTER
- MOUSE CONTROL PAD
- LEFT/RIGHT MOUSE CLICK
- BLACK SCREEN
- F5/ESC (PRESS AND HOLD F5 TO ESC)
- ON/OFF