



Why does the “Minimum Capacity to Restart (%)” setting not save?

On certain UPS models that support the Battery Capacity (%) attribute, the “Minimum Capacity to Restart (%)” setting will not be saved if an invalid value is entered.

The valid values for this setting are 0 (disabled) and 10 through 90. If a value of 1 through 9 is entered, the setting will not be saved.

Group				Filter
Name	Device	Type	Value	
> Battery Age (Years)	Device0105	Battery	1.5	
▼ Battery Capacity (%)	Device0105	Battery	100	
Minimum Capacity to Restart (%)			15	
Thresholds and Bounds				
Low Critical (Battery Low)			50	