



## SU5KRT3UTF Estimated Runtime

UPS	Battery Pack	Battery Pack Qty	Load in Watts																			
			250	500	750	1000	1250	1500	1750	2000	2250	2500	2750	3000	3250	3500	3750	4000	4250	4500	4750	5000
SU5KRT3UTF	*Internal Batteries	0	137	72	47	35	28	23	20	17	15	14	11	8.5	7.8	7.2	6.7	6.3	5.9	5.6	5.3	5.0
SU5KRT3UTF	*BP192V12RT3US	1	460	244	161	117	91	74	61	52	45	40	35	31	28	26	24	22	20	19	17	16
SU5KRT3UTF	*BP192V12RT3US	2	791	432	290	214	168	137	115	98	86	75	67	60	54	50	45	42	39	36	34	31
SU5KRT3UTF	*BP192V12RT3US	3	1116	620	421	314	248	204	171	147	129	114	101	91	83	75	69	64	59	55	52	48
SU5KRT3UTF	*BP192V12RT3US	4	1434	806	552	415	329	271	229	198	173	154	137	124	112	103	94	87	81	75	71	66
SU5KRT3UTF	**BP192V12RT3US	5	1744	991	683	516	411	340	288	249	219	194	174	157	143	131	120	111	104	97	90	85
SU5KRT3UTF	**BP192V12RT3US	6	2047	1173	812	616	493	409	347	301	265	236	211	191	174	159	147	136	127	118	111	104
SU5KRT3UTF	**BP192V12RT3US	7	2343	1353	941	716	574	477	407	353	311	277	249	225	206	189	174	161	150	140	132	124
SU5KRT3UTF	**BP192V12RT3US	8	2632	1531	1069	816	656	546	466	405	358	319	287	260	237	218	201	187	174	163	153	144
SU5KRT3UTF	**BP192V12RT3US	9	2915	1706	1196	915	737	615	525	457	404	361	325	295	269	248	229	212	198	185	174	164
SU5KRT3UTF	**BP192V12RT3US	10	3191	1879	1321	1013	818	683	585	510	451	403	363	330	301	277	257	238	222	208	196	184

All runtime values shown in minutes; \*Supports UPS Auto-detect and configuration; \*\*Use Tripp Lite's UPS EXTERNAL BATTERY CONFIGURATION SOFTWARE for complete integration