



## SU6KRT3UTFMB Estimated Runtime

UPS	Battery Pack	Battery Pack Qty	Load in Watts																			
			300	600	900	1200	1500	1800	2100	2500	2700	3000	3300	3600	3900	4200	4500	4800	5000	5400	5700	6000
SU6KRT3UTFMB	*Internal Batteries	0	117	60	39	29	23	19	17	14	11	8.5	7.7	7.0	6.4	6.0	5.6	5.2	5.0	4.1	3.5	3.0
SU6KRT3UTFMB	*BP192V12RT3US	1	394	203	132	96	74	59	49	40	36	31	28	25	22	20	19	17	16	15	14	13
SU6KRT3UTFMB	*BP192V12RT3US	2	682	362	240	176	137	111	93	75	69	60	53	48	43	39	36	33	31	28	27	25
SU6KRT3UTFMB	*BP192V12RT3US	3	966	523	350	259	204	166	139	114	104	91	81	73	66	60	55	51	48	44	41	38
SU6KRT3UTFMB	*BP192V12RT3US	4	1244	682	461	344	271	222	187	154	140	124	110	99	90	82	75	70	66	60	56	53
SU6KRT3UTFMB	**BP192V12RT3US	5	1518	841	572	429	340	280	236	194	178	157	140	126	115	105	97	89	85	77	72	68
SU6KRT3UTFMB	**BP192V12RT3US	6	1786	998	683	514	409	337	286	236	216	191	171	154	140	128	118	109	104	95	89	83
SU6KRT3UTFMB	**BP192V12RT3US	7	2048	1153	793	598	477	395	335	277	254	225	202	183	166	152	140	130	124	113	106	99
SU6KRT3UTFMB	**BP192V12RT3US	8	2305	1307	902	683	546	453	385	319	293	260	233	211	192	176	163	151	144	131	123	116
SU6KRT3UTFMB	**BP192V12RT3US	9	2557	1459	1010	767	615	510	435	361	332	295	265	240	219	201	185	172	164	150	140	132
SU6KRT3UTFMB	**BP192V12RT3US	10	2804	1609	1118	851	683	568	484	403	371	330	296	269	245	225	208	193	184	168	158	149

All runtime values shown in minutes; \*Supports UPS Auto-detect and configuration; \*\*Use Tripp Lite's UPS EXTERNAL BATTERY CONFIGURATION SOFTWARE for complete integration